
Multiply measurements shown by your base unit.

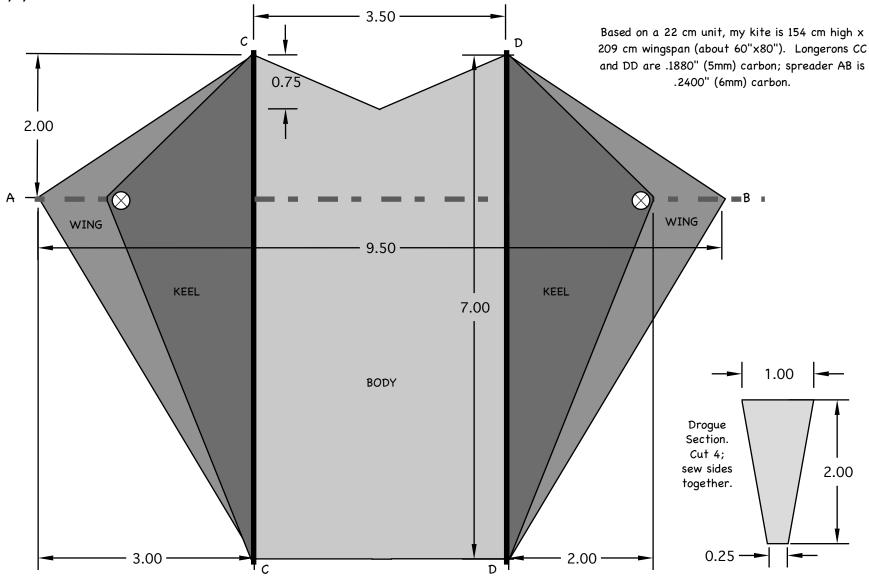

Connect bridle points with a line of 5x kite height; tie a loop knot in the middle for tow point.

Kite will fly without tail, but is much more stable when bowed with a drogue.

Connect bow line between wingtips A & B and bow about 1 unit deep.

Attach cone-shaped drogue with Y bridle 2.5x kite height from lower points C & D.

802/2007

